

Changing USER Codes (Gardtec 800/400/500/600 Series)

Action DISPLAY

 UNSET (or Time & Date)

Enter Code (Master Code)

 DO YOU WANT TO SET THE SYSTEM?

NO, NO - Until DO YOU WANT TO PROG USER CODES?

YES ENTER USER NUMBER (1 to 7*)

Enter User Number (NOT user code)

YES NOW ENTER CODE (between four & six digits or 000000 to delete)

OR Pass Fob across Display Area

YES CHOOSE TYPE (unless Master Code is being changed)

EITHER (choose from options displayed)

1 - (For Set Only)

2 - (For Main User)

3 - (For User)

4 - (For Master)

 (more options on different models)

YES USER NAME**

YES - to leave as is

NO - to Change (Yes when change complete)

 DO YOU WANT TO PROG USER CODES?

0 UNSET

* Some models have more users.

** Versions with user name text only.

Note: '0' = 'escape'

It is wise to record user numbers (not codes) and to whom they are allocated to facilitate code changes at a later date. To delete a user code, enter 000000 when asked for code.

Viewing the EVENT LOG (Gardtec 800/400/500/600 series LCD)

Action DISPLAY

 UNSET (or Time & Date)

Enter Code (Master Code)

 DO YOU WANT TO SET THE SYSTEM?

NO, NO - Until DO YOU WANT TO VIEW THE LOG?

YES

Now: 'NO'Key scrolls backwards through events, 'YES'Key scrolls forward.

To return to UNSET:

0, 0 - Until UNSET Displayed

Note: '0' = 'escape'



REMOVING AN INDIVIDUAL ZONE or ZONES

(Gardtec 800/400/500/600 Series)

Action	<u>DISPLAY</u>
	UNSET (or Time & Date)
Enter Code	DO YOU WANT TO SET THE SYSTEM?
NO,	DO YOU WANT TO REMOVE ZONES?
YES	ENTER ZONE NUMBER
Enter Zone Number	(do not enter 0 in front, e.g. just 3, not 03)
YES	DO YOU WANT TO REMOVE ZONES?
<i>(If you want to remove more zones, 'Yes' and repeat above)</i>	
<i>If you do not want to remove any further zones;</i>	

Press 0	DO YOU WANT TO SET THE SYSTEM?
YES	EXIT NOW

Please note; Zone or Zones are only removed for that particular time of setting. If display returns to UNSET, the whole procedure must be repeated if you wish to set with zones removed

